

# Vehicle Information

Make and model **Holden Trax**

 
Engine size Petrol


## How to unlock the vehicle:




### Key Access

Press the key release button to extend the key blade. The key can be used for the ignition and all locks.

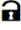 : Press to unlock the driver door or all doors, depending on the vehicle personalization settings. If equipped, the locking fuel door will also unlock. The hazard warning flashers may flash.

 : Press to lock the doors, and, if equipped, the locking fuel door.

## How to start the vehicle

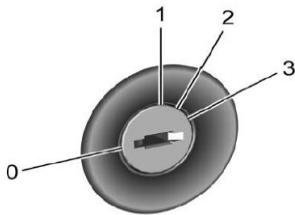

The ignition switch has four different positions.

The key must be fully extended to start the vehicle.

To shift out of P (Park), the ignition must be in ON/RUN and the regular brake pedal applied.

**0 (STOPPING THE ENGINE/LOCK/OFF)** : When the vehicle is stopped, turn the ignition switch to LOCK/OFF to turn the engine off.

## How to put the vehicle into reverse


### “R” REVERSE

Move the lever to this position only after the vehicle has come to a complete stop.




## Where the rear luggage compartment release is




To open the liftgate, press  on the door lock switch or on the Remote Keyless Entry (RKE) transmitter to unlock all doors, then use the touch pad on the liftgate.

The liftgate may also be opened while the vehicle is locked by pressing the touch pad while the RKE transmitter is within 1 m (3 ft) of the rear of the vehicle.

Press  on the door lock switch or on the RKE transmitter to lock the liftgate.

## Where you find the park brake

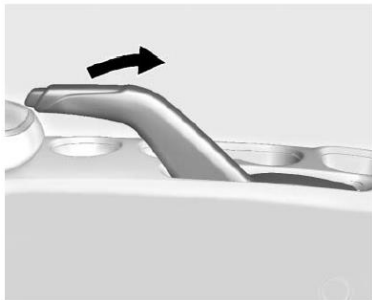

With the brake pedal applied, pull up firmly on the parking brake handle without pressing the release button.


To release the parking brake:

1. Hold the brake pedal down.
2. Pull the parking brake handle up until you can press the release button.
3. Hold the release button in as you move the brake handle all the way down.

## Where the fuel release is

The fuel cap is behind a hinged fuel door at the rear driver side of the vehicle.

If equipped, the fuel door is locked when the vehicle doors are locked.

Press  on the RKE transmitter to unlock.



To open the fuel door, push and release the rearward center edge of the door.

To remove the fuel cap, turn it slowly counterclockwise. The fuel cap has a spring in it; if the cap is released too soon, it will spring back to the right.

## What type of fuel does the vehicle take?

### Fuel selection

N00301002004


Your vehicle is designed to use unleaded gasoline only. It is equipped with a fuel tank filler pipe specifically designed to accept only a small diameter unleaded gasoline dispensing nozzle.

### WARNING

- Gasoline is highly flammable and explosive. You could be burned, seriously injured or killed when handling it. Whenever you refuel your vehicle, stop the engine and keep flames, sparks, and smoking materials away from the vehicle. Always handle fuel in well-ventilated outdoor areas.


## Where is the spare tyre kept & Where do you find the jack?

The spare tire and tools are located in the storage compartment in the rear of the vehicle.

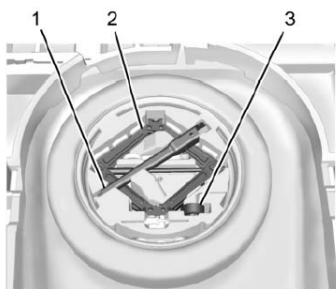

Without Subwoofer

1. Wrench
2. Jack
3. Strap

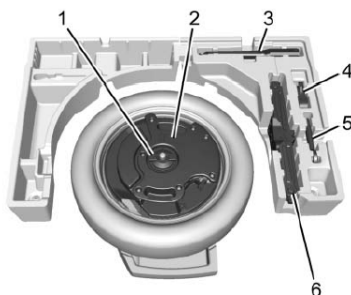

With Subwoofer

1. Center Retainer
2. Subwoofer
3. Wrench
4. Strap
5. Tow Eye (if equipped)
6. Jack

To access the spare tire and tools:

1. Open the liftgate.
2. Lift the trim cover.

3. If the vehicle has a subwoofer assembly on top of the spare tire, remove it by turning the center retainer counterclockwise.
4. If the vehicle does not have a subwoofer, turn the retainer counterclockwise to remove the spare tire.
5. Remove the spare tire, jack, and tools and place them near the tire being changed.