

# Vehicle Information

**Make and model**    **Toyota Hiace**

**Engine size**        3.0L DIESEL

## **Unlocking the vehicle**

Press the unlock button on your key

## **Starting the vehicle**

The ignition is on the right side of the steering wheel, just put the key in and turn.

## **Using the park brake and how to release**

Under the dashboard to the left of the steering column. To release, pull the lever while pushing the button, turn the lever and push in. To engage the park brake pull the lever.

## **Fuel release**

On the right side of the steering wheel, at the bottom of the dash board beside the bonnet release.

## **What type of fuel does the vehicle take?**



## **Rear luggage compartment release**

There is a small button under the lip of the rear luggage compartment, press this and lift to open the rear luggage compartment.

## **How big is the luggage area in the van?**

The luggage area is 170cm wide, 156cm high and 90cm deep.

## **Where are the spare tyre and jack kept?**

At rear, underneath the vehicle

## **Does the vehicle have Bluetooth?**

Yes